


OPERATING INSTRUCTIONS FOR #490 EWE HEADLOCK

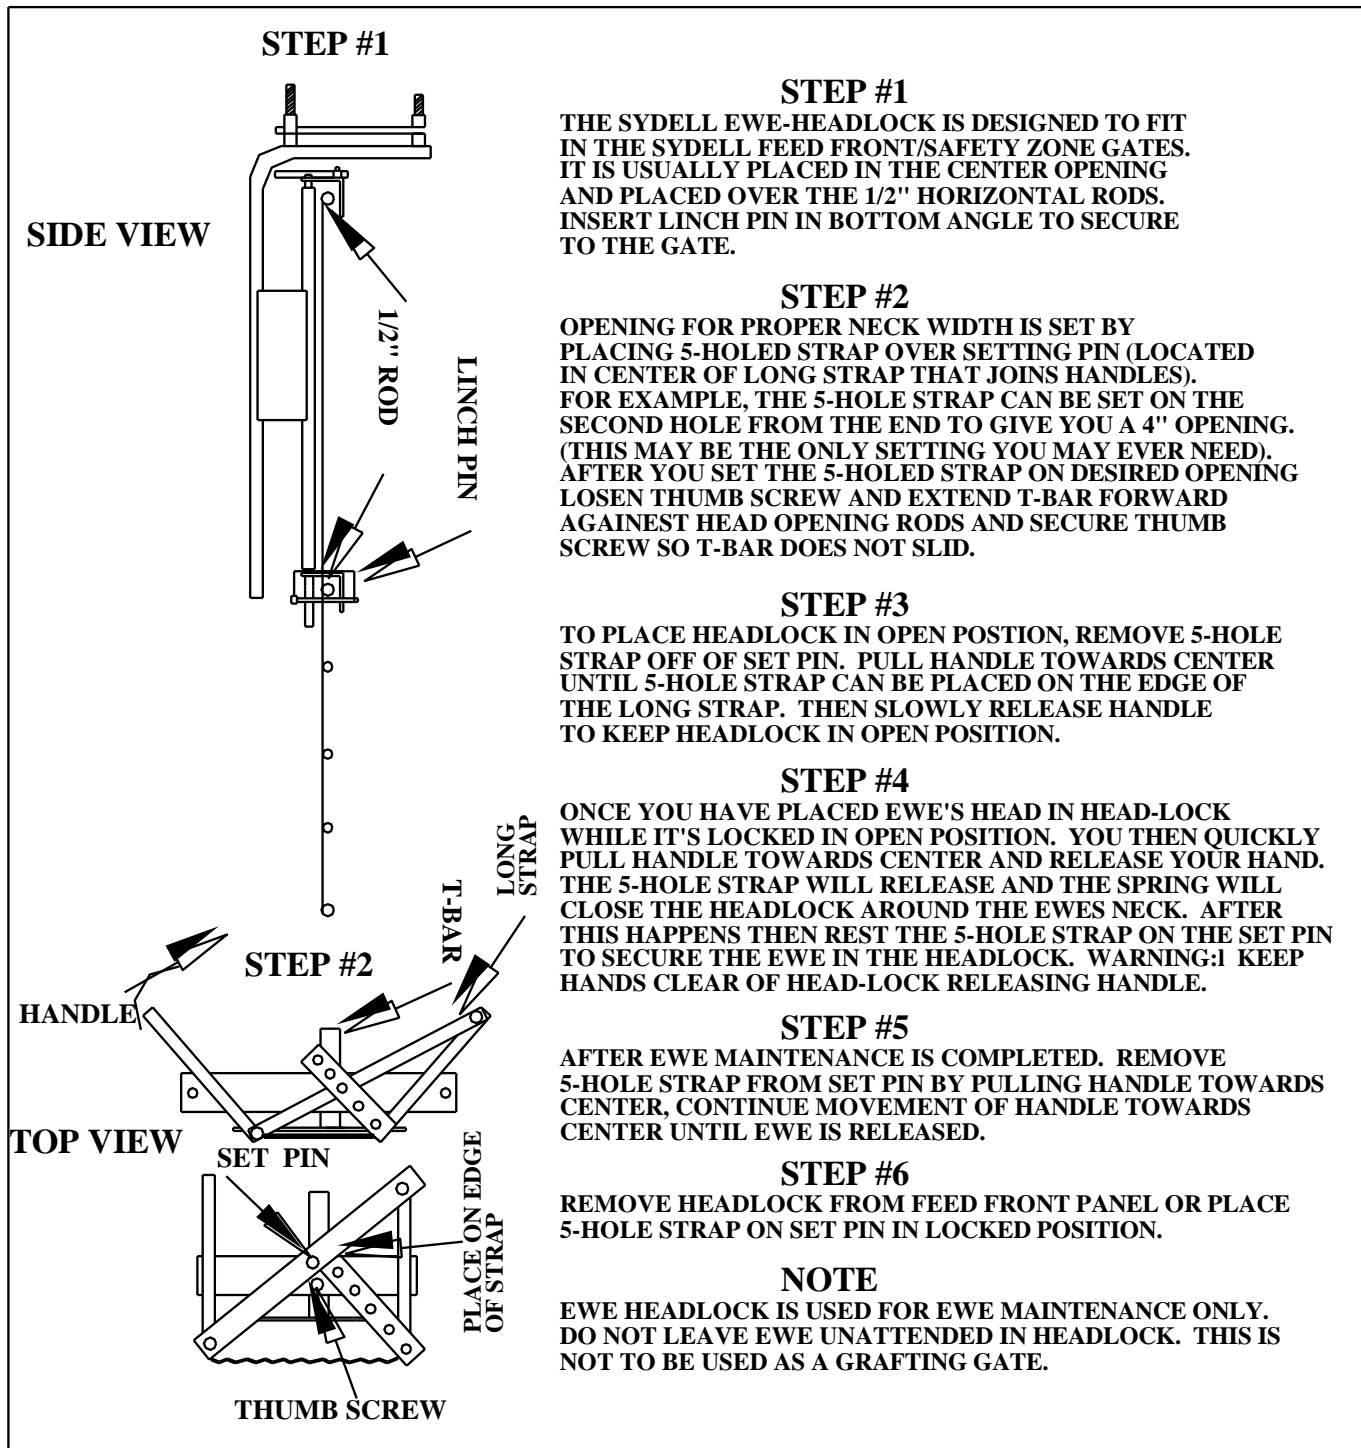

STEP #1

THE SYDELL EWE-HEADLOCK IS DESIGNED TO FIT IN THE SYDELL FEED FRONT/SAFETY ZONE GATES. IT IS USUALLY PLACED IN THE CENTER OPENING AND PLACED OVER THE 1/2" HORIZONTAL RODS. INSERT LINCH PIN IN BOTTOM ANGLE TO SECURE TO THE GATE.

STEP #2

OPENING FOR PROPER NECK WIDTH IS SET BY PLACING 5-HOLE STRAP OVER SETTING PIN (LOCATED IN CENTER OF LONG STRAP THAT JOINS HANDLES). FOR EXAMPLE, THE 5-HOLE STRAP CAN BE SET ON THE SECOND HOLE FROM THE END TO GIVE YOU A 4" OPENING. (THIS MAY BE THE ONLY SETTING YOU MAY EVER NEED). AFTER YOU SET THE 5-HOLE STRAP ON DESIRED OPENING LOSEN THUMB SCREW AND EXTEND T-BAR FORWARD AGAINST HEAD OPENING RODS AND SECURE THUMB SCREW SO T-BAR DOES NOT SLID.

STEP #3

TO PLACE HEADLOCK IN OPEN POSITION, REMOVE 5-HOLE STRAP OFF OF SET PIN. PULL HANDLE TOWARDS CENTER UNTIL 5-HOLE STRAP CAN BE PLACED ON THE EDGE OF THE LONG STRAP. THEN SLOWLY RELEASE HANDLE TO KEEP HEADLOCK IN OPEN POSITION.

STEP #4

ONCE YOU HAVE PLACED EWE'S HEAD IN HEAD-LOCK WHILE IT'S LOCKED IN OPEN POSITION. YOU THEN QUICKLY PULL HANDLE TOWARDS CENTER AND RELEASE YOUR HAND. THE 5-HOLE STRAP WILL RELEASE AND THE SPRING WILL CLOSE THE HEADLOCK AROUND THE EWES NECK. AFTER THIS HAPPENS THEN REST THE 5-HOLE STRAP ON THE SET PIN TO SECURE THE EWE IN THE HEADLOCK. WARNING: KEEP HANDS CLEAR OF HEAD-LOCK RELEASING HANDLE.

STEP #5

AFTER EWE MAINTENANCE IS COMPLETED. REMOVE 5-HOLE STRAP FROM SET PIN BY PULLING HANDLE TOWARDS CENTER, CONTINUE MOVEMENT OF HANDLE TOWARDS CENTER UNTIL EWE IS RELEASED.

STEP #6

REMOVE HEADLOCK FROM FEED FRONT PANEL OR PLACE 5-HOLE STRAP ON SET PIN IN LOCKED POSITION.

NOTE

EWE HEADLOCK IS USED FOR EWE MAINTENANCE ONLY. DO NOT LEAVE EWE UNATTENDED IN HEADLOCK. THIS IS NOT TO BE USED AS A GRAFTING GATE.



SYDELL INC.

46935 SD Hwy. 50

Burbank, SD 57010

(605) 624-4538

www.sydell.com

email: sydell@sydell.com