


ASSEMBLY INSTRUCTION FOR #736 GOAT STANCHION

STEP #1

LAY THE DECK TOP ON THE GROUND REMOVE LINCH PIN AND FOLD LEGS OUT UNTIL EACH SOLID ROD END ALIGNS SIDE BY SIDE, SO THAT YOU CAN INSERT LINCH PIN BACK IN THE FIRST WELDED NUT AND THROUGH ROD ENDS, AND THEN SECOND WELDED NUT, THEN SECURE LINCH PIN. TURN DECK OVER ON ITS LEGS

STEP #2

REMOVE L-BOLT (WHICH IS ENCLOSED IN SHRINK-WRAP ON NECK SLEEVE). SCREW THE L-BOLT INTO THE WELDED NUT ON THE NECK SLEEVE.

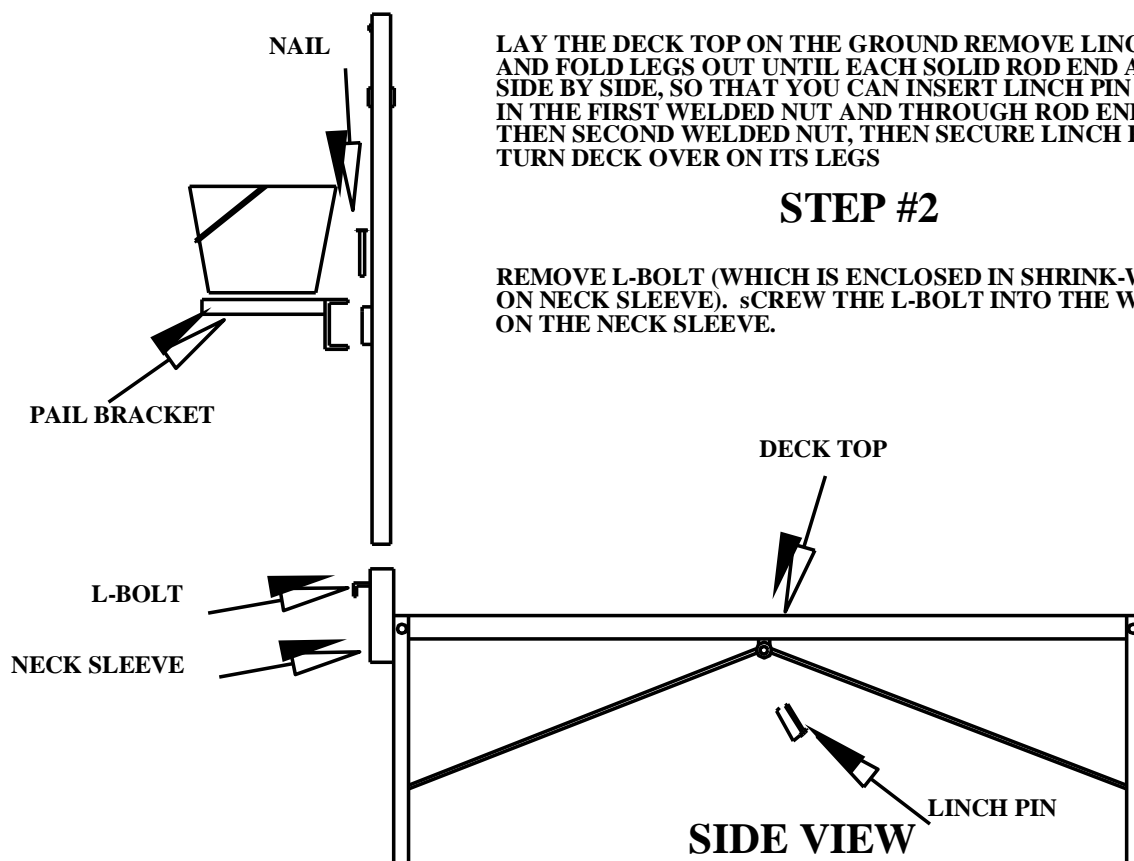

STEP #3

INSERT STANCHION INTO NECK SLEEVE, AND SECURE L-BOLT TO DESIRED HEIGHT.

STEP #4

ATTACH PAIL BRACKET TO STANCHION USING NAIL.

PARTS LIST

1-FOLD-UP STAND
1-#210 8" PAIL BRACKET
1-NAIL

1-#735 HEAD STANCHION
1-#211 5QT F-SHOCK PAIL
1-INSTRUCTION



SYDELL INC.

46935 SD Hwy. 50
Burbank, SD 57010
(605) 624-4538

www.sydell.com

email: sydell@sydell.com