


ASSEMBLY INSTRUCTIONS FOR #915, #925, AND #925A THREE WAY SORT GATE

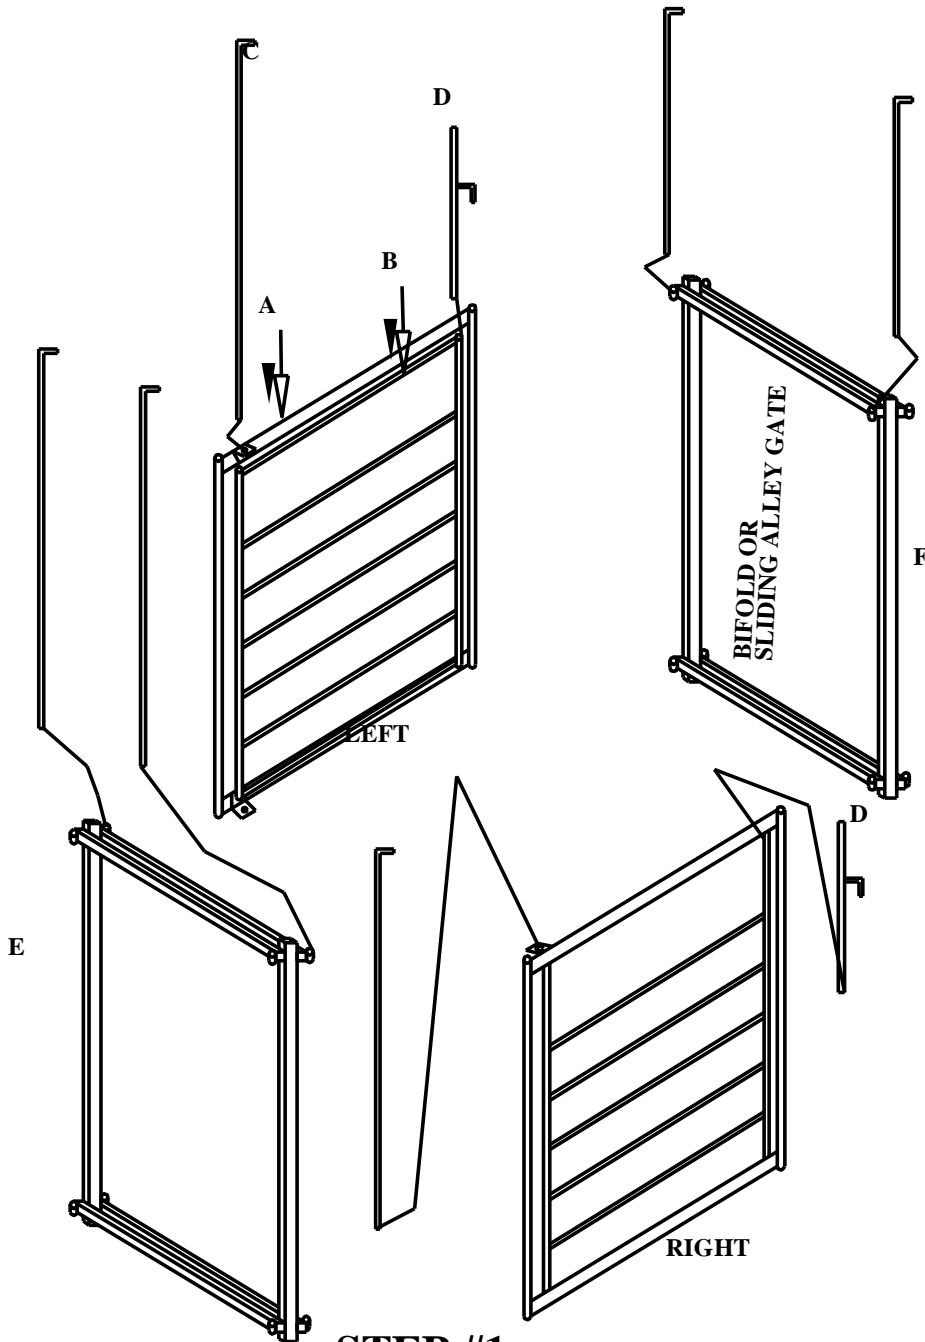

STEP #1

FASTEN GATES (B) INTO FRAME (A) USING (2)
1/2" X 42" DROP PINS.

STEP #2

SLIDE HANDLE (D) INTO TOP OF SORT GATE AS SHOWN.

STEP #3

FASTEN LEFT PANEL (A) INTO "E" AND "F" USING (2) 1/2"
X 42" DROP PINS (C).

STEP #4

REPEAT STEP #3 WITH THE RIGHT PANEL "A"

SYDELL INC.

46935 SD Hwy. 50

Burbank, SD 57010

(605) 624-4538

www.sydell.com

email: sydell@sydell.com