

ASSEMBLY INSTRUCTIONS FOR #870-#876 HORNED GOAT FENCELINE AND COMBO FEEDERS



SYDELL INC.

46935 SD Hwy. 50

Burbank, SD 57010

(605) 624-4538

www.sydell.com

email: sydell@sydell.com

STEP #1

INSERT 6" LEGS INTO SOLID ENDS AND
SECURE AT DESIRED HEIGHT WITH SET BOLT

NOTE: DIAGRAM A

STEP #2

LOOSEN (3) SET BOLTS ON 1 1/4" X 2" SQUARE TUBING
TO ALLOW 1" SQUARE TUBING TO SLIDE INSIDE.

NOTE: DIAGRAM B DIAGRAM FOR LOCATION OF SET BOLTS.

STEP #3

INSERT PAN RAILS AND FLOOR SUPPORT INTO 1 1/4 X 2" SLEEVES
W/ SET BOLTS AS SHOWN.

NOTE: ON 4' FEEDERS THE FLOOR SUPPORT IS A SINGLE RAIL
NOTE: DIAGRAM B-FLOOR SUPPORT PICTURED IS FOR A 8' FEEDER

STEP #4

CENTER PAN IN FEEDER AND SECURE WITH HOSE CLAMPS AS SHOWN.

NOTE: DIAGRAM C

STEP #5

ATTACH HAY MANGER TO SOLID ENDS USING 5/16 X 2" BOLTS
AND LOCK NUTS AS SHOWN

NOTE: DIAGRAM B

STEP #6

ATTACH STEP TO FLOOR SUPPORT USING (2) HOSE CLAMPS AS SHOWN.

NOTE: DIAGRAM D

ASSEMBLY INSTRUCTIONS FOR #870-#876 HORNED GOAT FENCELINE AND COMBO FEEDERS CONT.

DIAGRAM A

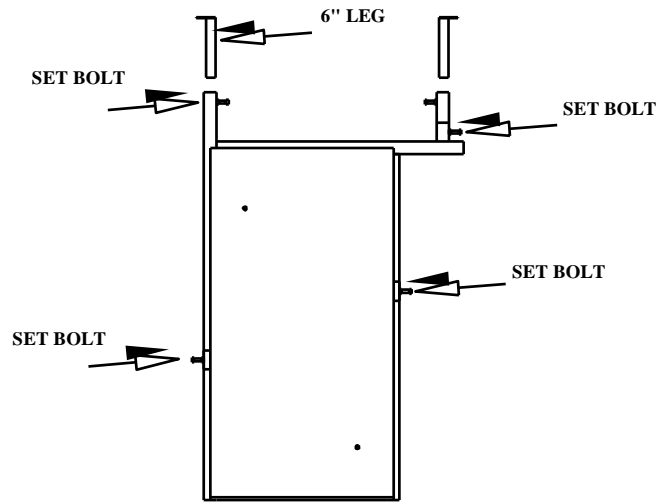


DIAGRAM B

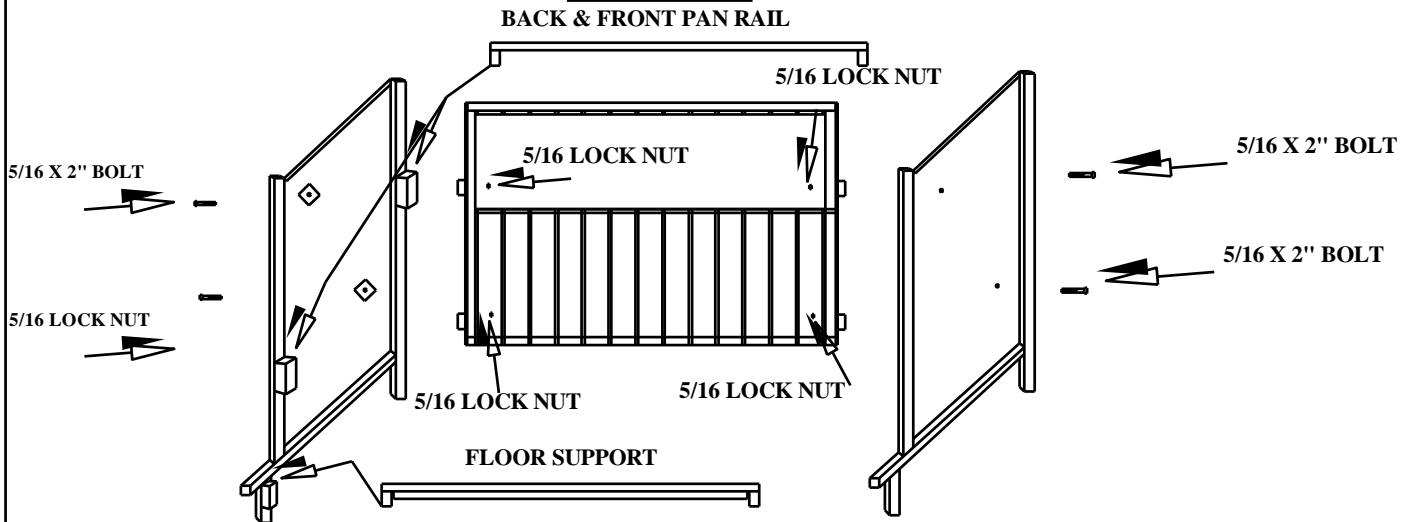


DIAGRAM C


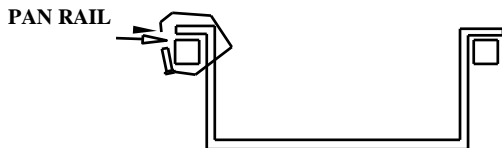


DIAGRAM D

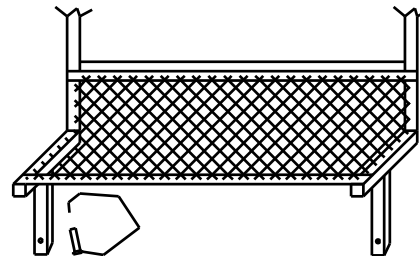

NOTE: PLACE HOSE CLAMP AROUND FLOOR SUPPORT AND FLOOR