



ASSEMBLY INSTRUCTIONS FOR #974A AUTO HEAD GATE

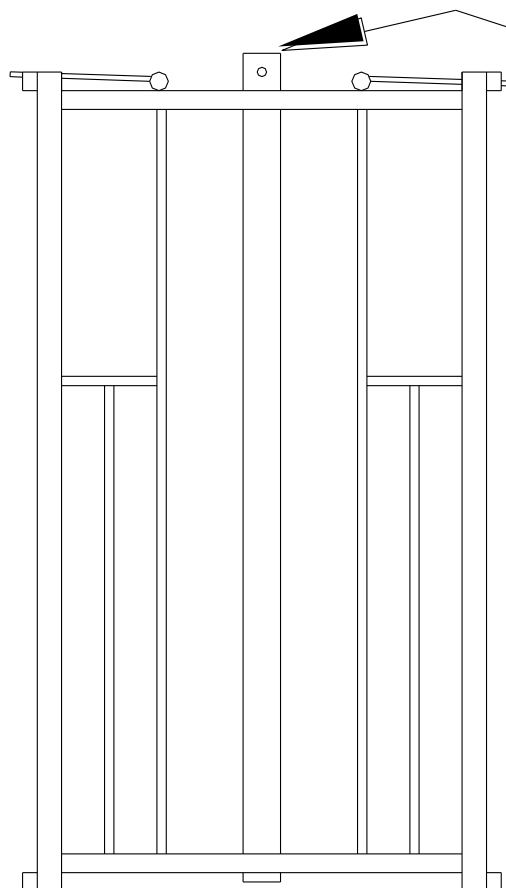

SIDE VIEW

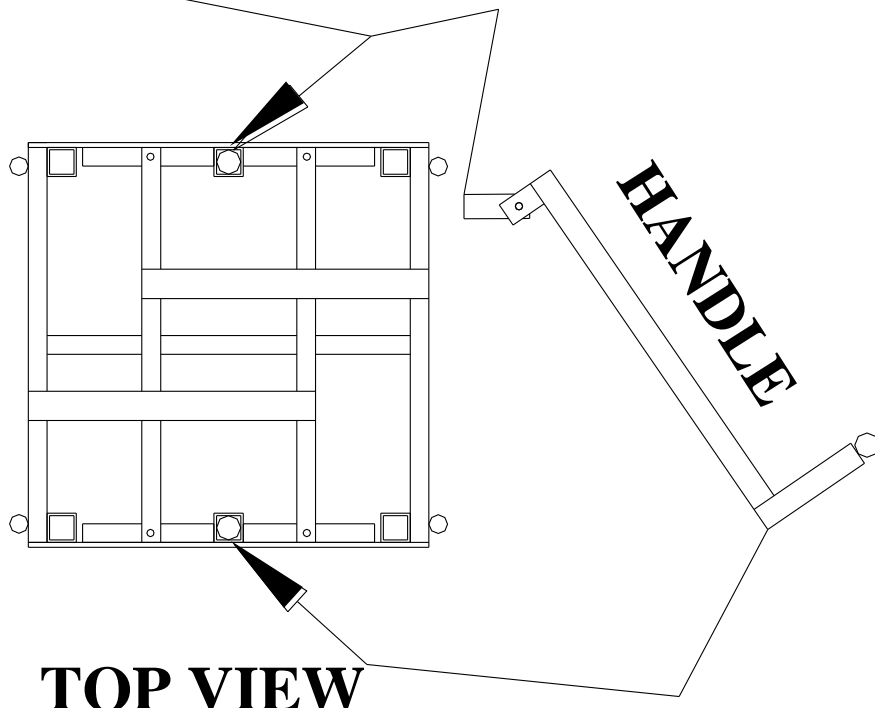

TOP VIEW

STEP #1

REMOVE ALL WIRE TIES FROM THE MAIN CAGE.

STEP #2

REMOVE (2) 3/8 X 2" BOLTS FROM HANDLE UNIT.

STEP #3

**ATTACH HANDLE UNIT TO TOP OF CAGE AS SHOWN
AND SECURE WITH (2) 3/8 X 2" BOLTS AND LOCK NUTS.**



SYDELL INC.

46935 SD Hwy. 50

Burbank, SD 57010

(605) 624-4538

www.sydell.com

email: sydell@sydell.com