
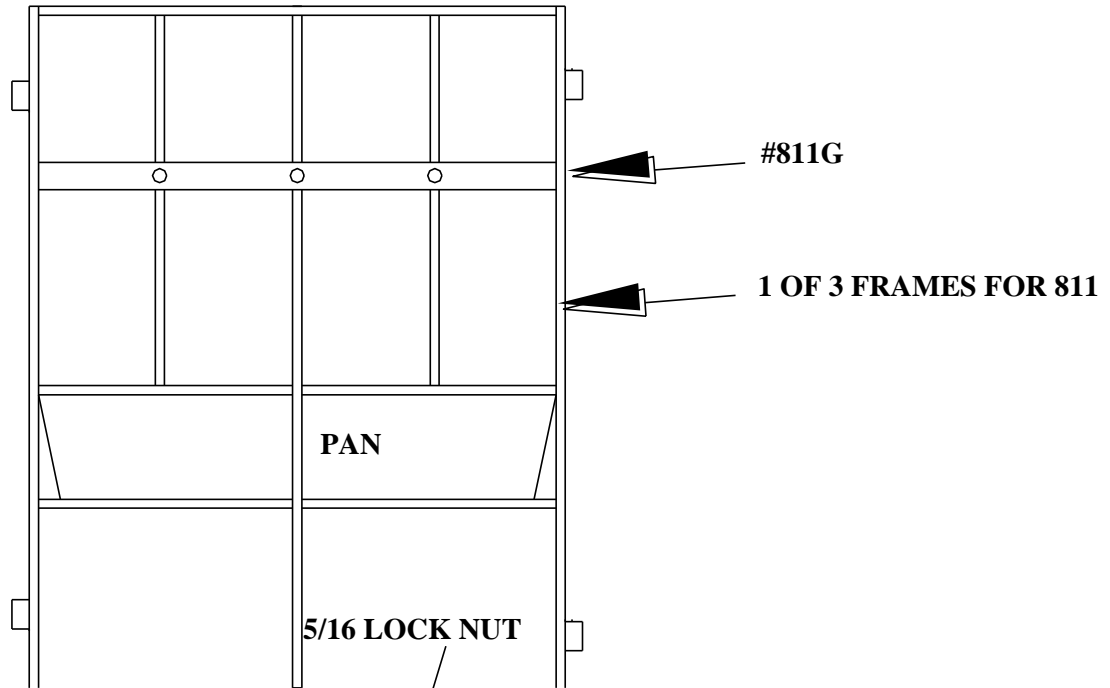


# ASSEMBLY INSTRUCTION FOR #811G GUARD FOR #811

**FIGURE #2**



**FIGURE #1**

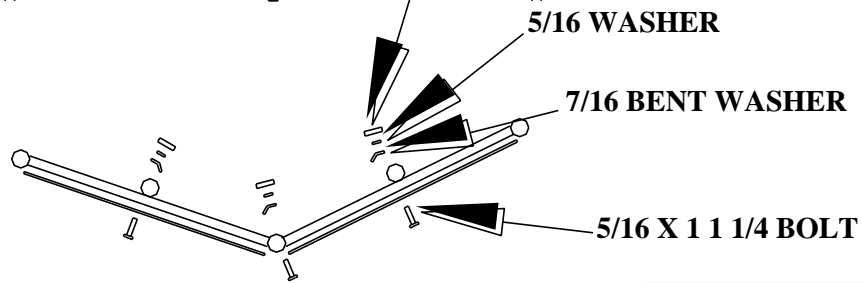

## STEP #1

ATTACH STRAP GUARD WITH 5/16 X 1 1/4 BOLTS  
5/16 WASHERS, AND 5/16 LOCK NUTS TO MAIN FRAMES  
OG 811 BY HAND AS SHOWN IN FIGURE #1

## STEP #2

SLIDE STRAP GUARD TO DESIRED HEIGHT  
AS IN FIGURE #2 AND SECURE NUTS  
AND BOLTS TO STRAP GUARD.

## PARTS LIST

9-5/16 LOCK NUTS  
9-7/16 BENT WASHERS  
3-STRAP GUARDS  
9-5/16 FLAT WASHERS  
9-5/16 X 1 1/4 BOLTS  
1-INSTRUCTIONS



## SYDELL INC.

46935 SD Hwy. 50  
Burbank, SD 57010  
(605) 624-4538  
[www.sydell.com](http://www.sydell.com)  
email: [sydell@sydell.com](mailto:sydell@sydell.com)