


# ASSEMBLY INSTRUCTIONS FOR #986 ROPE SUPPORT

## STEP #1

INSTALLTION OF #986 ON #950-T (CURVED PANELS)  
IS LOCATED AT THE BEGINNING OF THE CURVE.  
NOTE DRAWING

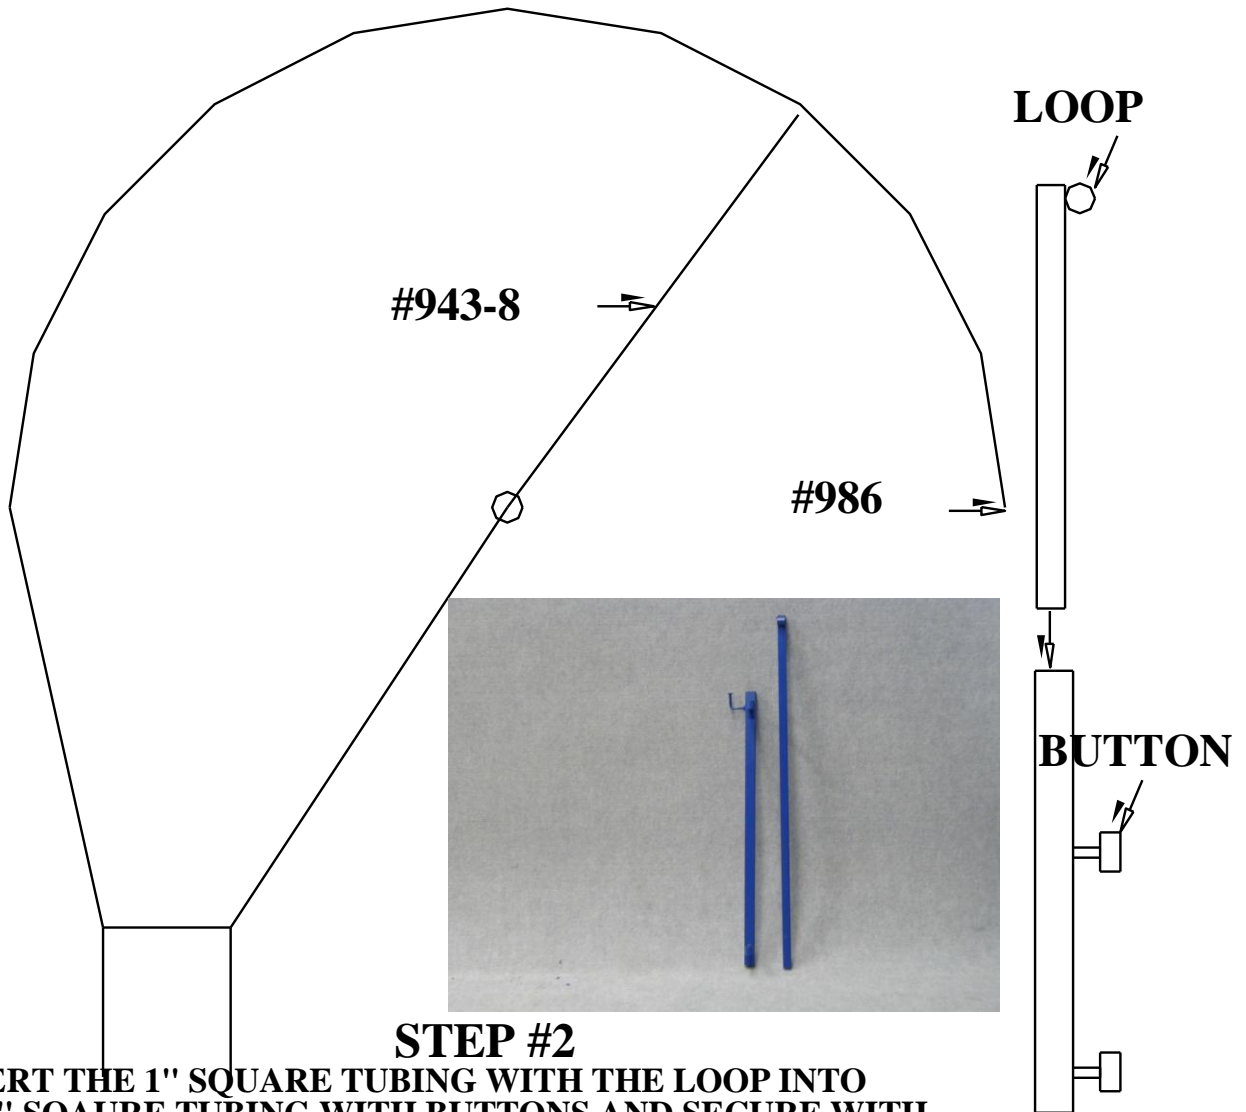

## STEP #2

INSERT THE 1" SQUARE TUBING WITH THE LOOP INTO  
1 1/4" SQAURE TUBING WITH BUTTONS AND SECURE WITH  
L-BOLT.

## NOTE:

#986 CAN BE INSTALLED ON ANY OF THE CORRAL  
PANELS IN THE WORKING SYSTEM.

## STEP #3

TO INSTALL THE #986 PLACE THE BUTTONS OF THE ROPE SUPPORT  
BETWEEN THE BUTTONS ON THE PANEL AND PLACE A DROP PIN  
DOWN THROUGH THE BUTTONS TO SECURE THE ROPE SUPPORT.  
SECURE THE ROPE TO THE GUILLOTINE GATE AND PLACE  
THE ROPE THROUGH THE LOOP ON THE ROPE SUPPORT.